

!!!WARNING!!!

READ AND UNDERSTAND ALL INSTRUCTIONS INCLUDED WITH THIS KIT
RELIEVE ALL PRESSURE FROM SYSTEM BEFORE REMOVING VALVE FOR SERVICE

A. Disassembly and Reassembly

1. Remove Locknut [1], Lock Washer [2], and Handwheel [3] from Stem [4] and discard.
2. Install Spring [5] onto Stem [4].
3. Install Bushing [6] over threads of Stem [4].
4. Install new Handwheel [7] onto Stem [4].
5. Install Washer [8] and Thin Locknut [9] onto Stem [4] and tighten hand tight.

NOTE: DO NOT OVER TIGHTEN LOCKNUT.

B. Component List

1. Locknut, not shown
2. Lock Washer, not shown
3. Handwheel, not shown
4. Stem
5. Spring
6. Bushing
7. Handwheel, new
8. Washer
9. Thin Locknut



WARNING: These products contain a chemical known to the state of California to cause cancer and birth defects or reproductive harm



Marshall Excelsior Company

1506 George Brown Drive Marshall, MI 49068
Phone (269) 789-6700 Fax (269) 781-8340
www.marshallexcelsior.com

The contents of this publication are for informational purposes only. While every effort has been made to ensure accuracy, these contents are not to be construed as warranties or guarantees, expressed or implied, regarding the products or services described herein or for their use or applicability. Marshall Excelsior Co. reserves the right to modify or improve the designs or specifications of such products at any time without notice. The MEC™ logo is the trademark of Marshall Excelsior Co.