



SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES

MULTI-PORT RELIEF VALVE MANIFOLD

INSTRUCTION MANUAL

10480 Shady Trail #106
Dallas, TX 75220
800-345-8105/214-357-4591
Fax 214-357-5923
3094 Connahbrook
Memphis, TN 38116
800-238-2664/901-332-5272
Fax 901-346-1790



WARNING: These products contain a chemical known to the state of California to cause cancer and birth defects or reproductive harm

!WARNING!

Failure to follow these instructions or to properly install and maintain this equipment could result in an explosion and/or fire causing property damage and personal injury or death.

Install, operate and maintain all equipment in accordance with federal, state, and local codes and these instructions. The installation in most states must also comply with NFPA standards 58 and 59, and ANSI K61.1.

Only personnel trained in the proper procedures, codes, standards and regulations of the LP-Gas and NH₃ industries should install, maintain and service this equipment. Be sure all instructions are read and understood before installation, operation and maintenance. These instructions must be passed along to the end user of the product.

!GENERAL WARNING!

Aforementioned products are mechanical devices that are subject to wear, contaminants, corrosion, and aging of components made of materials such as rubber and metal. Over time these devices will eventually become inoperative. The safe service life of these products will reflect the environment and conditions of use that they are subjected to. Regular inspection and maintenance is essential. Squibb-Taylor products have a long record of quality and service, so LP-Gas dealers may forget hazards that can arise from using aging devices that have outlived their safe service life.


Each Squibb-Taylor Multi-Port Manifold Assembly is produced with MEC manifold bodies and STA1311 Series Relief Valves.

APPLICATION:

For use with LPG & NH₃ stationary storage containers with 2" NPT connections. These Relief Manifolds have an additional relief valve excluded from the flow rating, which allows for service and/or exchange of any one relief valve without evacuating the tank. Our large port selection handle allows for each specific valve port to be closed off so that the relief valve may be removed while the remaining valves remain under pressure protecting the tank and contents. Each manifold model is rated based on the flow through the relief valves with one valve removed from service.

FEATURES:

- Ductile Iron Body
- All Stainless Steel Internal Components
- Durable Teflon V-Pack Stem Seals
- Large Diameter Port Selection Handle and Port Indicator
- Molded Rubber Weather Guard for Manifold Rotary Gear
- Available with 250 PSIG and 265 PSIG Relief Valve Set

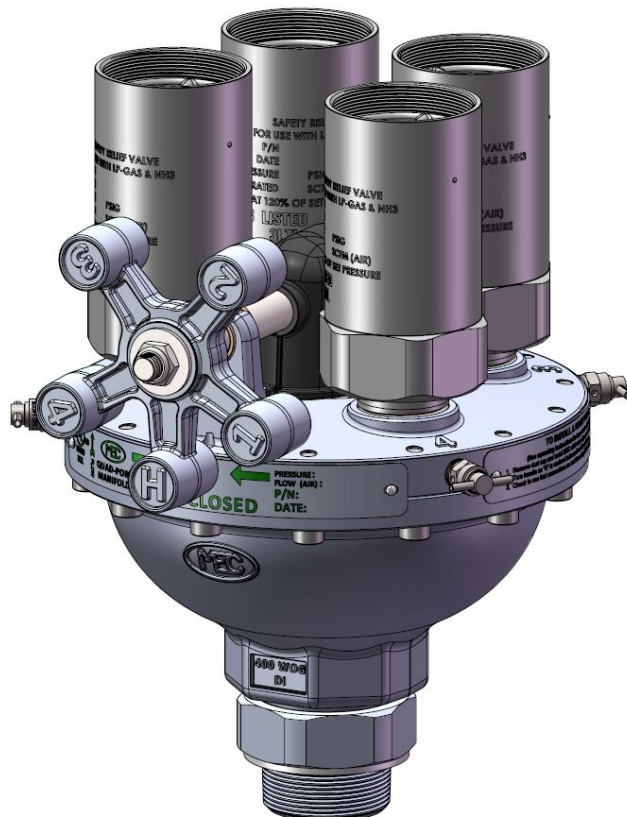

Pressures

- Relief valves provided with weep hole for drainage

REQUIREMENTS FOR PRESSURE RELIEF VALVES

Every container used for storing or hauling LP-Gas and anhydrous ammonia must be protected by a pressure relief valve. These valves are designed to protect the container against the development of hazardous conditions which might be created by any of the following:

- Hydrostatic pressures due to overfilling or the trapping of liquid between two points.
- High pressures resulting from exposure of the container to excessive external heat.
- High pressures due to the use of incorrect fuel.
- High pressures due to improper purging of the container.

NOTE

Consult NFPA #58 for LP-Gas and ANSI #K61.1 for anhydrous ammonia, and/or any applicable local and state regulations governing the application and use of pressure relief valves.

SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES RELIEF VALVE MANIFOLD

INSTALLATION

!CAUTION!

Contact or inhalation of liquid propane, ammonia and their vapors can cause serious injury or death. NH₃ and LP-gas must be released outdoors in air currents that will insure dispersion to prevent exposure to people and livestock. LP-Gas must be kept far enough from any open flame or other source of ignition to prevent fire or explosion. LP-Gas is heavier than air and will not disperse or evaporate rapidly if released in still air. An abundant supply of clean water must be readily available and easily accessible as a means of providing IMMEDIATE First Aid treatment for exposure to anhydrous ammonia.

Consult NFPA Codes 58 and 59 / ANSI K61.1 and/or any applicable regulations governing the application and use of pressure relief valves and relief valve manifolds. Make sure you are thoroughly trained before you attempt to install, inspect or maintain this equipment.

***Proper installation is essential to the safe operation of the relief valve manifold and pressure relief valves.** Install the relief valve manifold using the following steps:

1. Verify that the start-to-discharge setting and manifold flow rate capacity is correct for the application.
2. Check that the relief valves are clean and free of foreign material in the relief valve outlets.
3. Inspect the manifold inlet and couple to ensure no damage or foreign material is present.
4. Install manifold NPT connection to container, coupling, or bung.
5. Check for damage and proper operation after manifold assembly installation.
6. Rotate the valve selection handle to the home position to ensure all reliefs are active.
7. After the container is charged with product, check joints for leakage using approved leak detector.
8. If a pipe-away is installed, see section for pipe-away installation.
9. After installation is complete, ensure protective caps are installed onto all relief valves.

INSPECTION AND MAINTENANCE

A pressure relief valve discharges when some extraordinary circumstance causes an over pressure condition in the container. If a pressure relief valve is known to have discharged, the relief valve, as well as the entire system, should be immediately and thoroughly inspected to determine the reason for the discharge. In the case of discharge due to fire, the valve should be removed from service and replaced.

Relief valves should be inspected each time the container is filled but no less than once a year. If there is any doubt about the condition of the valve, it must be replaced.

!WARNING!

Eye protection must be worn when performing inspection on relief valves under pressure. Never look directly into a relief valve under pressure or place any part of your body where the relief valve discharge could impact it. In some cases a flashlight and small mirror are suggested to assist when making visual inspections.

In the case of a pressure relief valve that has opened due to a pressure beyond its start-to-discharge setting, the chances of foreign material lodging between the seat and the disc is low however the possibility is always present. If the relief valve continues to leak at pressure below its start-to-discharge setting it must be replaced.

If there is any doubt about the condition of the relief valve, or if the relief valve has not been protected by a cap for some time, it should be replaced before refilling the container.

MANIFOLD INSPECTION / MAINTENANCE CHECKLIST: (MINIMUM ONCE PER MONTH)

1. Cap:

Check that the protective cap is in place over each relief valve or pipeaway stack outlet and has a snug fit. The protective cap helps protect the relief valve against possible malfunction caused by rain, sleet, snow, ice, sand, dirt, pebbles, insects, other debris and contamination.

REPLACE DAMAGED OR MISSING CAPS AT ONCE AND KEEP A CAP IN PLACE AT ALL TIMES.

2. Weep Holes:

Inspect and clear debris from the relief valve weep holes. Dirt, ice, paint, and other foreign particles can prevent proper drainage from the valve body.

IF THE WEEP HOLES CANNOT BE CLEARED, REPLACE THE RELIEF VALVE.

3. Gear Set Weather Boot:

Check that the gear set weather boot is in place and in good condition. This prevents water and contaminants from entering the manifold valve gears.

MANIFOLD INSPECTION / MAINTENANCE CHECKLIST: (MINIMUM ONCE PER YEAR)

1. Valve Port Selection Handle:

Slowly rotate the valve selection handle through each port position. This helps keep the gear set and manifold valve components lubricated and working properly. Return the valve selection handle to the home position to ensure all reliefs are active.

2. Relief Valve Spring:

Exposure to high concentrations of water, salt, industrial pollutants, chemicals and contaminants could cause metal parts to fail including the relief valve spring.

SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES RELIEF VALVE MANIFOLD

3. Physical Damage:

Ice accumulations and improper installation could cause mechanical damage.

IF THERE ARE ANY INDICATIONS OF DAMAGE, REPLACE THE VALVE.

4. Tampering or Re-adjustment:

Pressure relief valves are factory set to discharge at specified pressures.

IF THERE ARE ANY INDICATIONS OF TAMPERING OR RE-ADJUSTING, REPLACE THE VALVE.

5. Seat / Coupler Fitting Leakage:

Check for leaks in the seating area using a noncorrosive leak detection solution.

IF THERE IS ANY INDICATION OF LEAKAGE REPLACE THE VALVE.

Never force a relief valve closed and continue to leave it in service. This could result in damage to the valve and possible rupture of the container or piping on which the valve is installed.

6. Corrosion: REPLACE THE VALVE IF THERE ARE ANY SIGNS OF CORROSION OR CONTAMINATION.

7. Moisture, Foreign Particles or Contaminants in the Valve:

Foreign material such as paint, tar or ice in relief valve parts can impair the proper functioning of the valves. Grease placed in the valve body may harden over time or collect contaminants, thereby impairing the proper operation of the relief valve.

DO NOT PLACE GREASE IN THE VALVE BODY; REPLACE THE VALVE IF THERE ARE ANY INDICATIONS OF MOISTURE OR FOREIGN MATTER IN THE VALVE.

8. Corrosion or Leakage at Container Connection:

Check container to manifold connection with approved leak detection solution.

REPLACE THE MANIFOLD IF THERE IS ANY INDICATION OF CORROSION OR LEAKAGE AT THE CONNECTION BETWEEN THE MANIFOLD AND CONTAINER.

!CAUTION!

Never plug the outlet of a pressure relief valve. Any device used to stop the flow of a properly operating pressure relief valve that is venting an over pressurized container can cause severe consequences.

!WARNING!

REPLACEMENT OF PRESSURE RELIEF VALVES

Under normal conditions, the useful safe service life of a pressure relief valve is 10 years from the original date of manufacture. However, the safe useful life of the valve may be shortened and replacement required in less than 10 years depending on the environment in which the valve lives. Inspection and maintenance of pressure relief valves is very important. Failure to properly inspect and maintain pressure relief valves could result in personal injuries or property damage.

Relief valves are required to function under widely varying conditions. Corrosion, aging of the resilient seat disc and friction all proceed at different rates depending upon the nature of the specific environment and application. Gas impurities, product misuse and improper installations can shorten the safe life of a relief valve. The gas dealer must observe and determine the safe useful life of relief valves in his systems.

For Additional Information Read:

1. NFPA # 58, "Storage and Handling of Liquefied Petroleum Gases".
2. NFPA # 59, "LP-Gases and Utility Gas Plants
3. ANSI K61.1, "American National Standard Safety Requirements for the Storage and Handling of anhydrous Ammonia"

Relief valves in service beyond their service life can exhibit the following degradation in function:

- They may leak at pressures below the set pressure.
- They may open and fail to properly reseal.
- They may open at higher than set pressure.

These failures to function properly are due primarily to four "environmental" conditions:

1. Corrosion of metal parts (particularly springs) which result in the component parts failing to perform.
2. Deterioration of synthetic rubber seat disc material.
3. Clogging or "cementing" of the movable relief valve components so that their movement is restricted.
4. Debris on the valve seat after the relief valve opens, effectively preventing the valve from resealing.

Corrosion is caused by water, corrosive atmospheres of salt and high industrial pollutants, chemicals, and contaminants. High concentrations can attack the metal parts vigorously. No suitable metals are totally resistant to such corrosion.

Synthetic rubber and seat disc materials can also be attacked by impurities in the gas and corrosive atmospheres, particularly those with Sulphur Dioxide. There are no suitable rubber materials which resist all contaminants.

"Cementing" of relief valve parts can be caused by normal industrial atmospheres containing particles of dirt, iron oxide, metal chips, etc. combined with water, oil, or grease. Ice collecting in recessed valves could cause failure to open. Paint and tar in relief valves also cause failure to function properly.

SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES RELIEF VALVE MANIFOLD

NOTE

It is not necessary or desirable to lower tank vapor pressure when removing or installing a relief valve. Vapor pressure provides additional closing force to manifold port valve.

TO REMOVE A SAFETY RELIEF VALVE:

1. Slowly turn valve selection handle until ID number of relief valve to be replaced is aligned with the "Port Closed" indicator on the manifold body.
2. Vent trapped vapor by opening the vent valve located below the relief valve to be removed.
Note: It may be necessary to make slight adjustments to the position of the valve port selection handle to completely seal the internal pilot valve. If venting continues, close vent valve and unseat manifold valve by slowly moving valve port selection handle a quarter turn or more in either direction then return handle to close desired port.
3. If pipe-aways are installed, see section of pipeaway removal.
4. **WARNING:** Wait for venting to stop before remove valve. After venting stops, remove relief valve.
5. Remove cap and valve stabilizing clamp from relief valve.
6. Remove relief valve from manifold using MEC MEP124.
7. Close vent valve and cover open port with weather cap attached to manifold gear boot.
Note: Relief valve must be replaced within a short period as the manifold port valve is not intended for primary seal for extended periods of time.

TO INSTALL A SAFETY RELIEF VALVE:

1. Remove weather cap from closed manifold port.
2. Install relief valve of proper size and rating according to instructions provided with the valve. **WARNING:** Valve must be installed with weep hole oriented away from operator, from all other valves, manifolds, and other pressure containing piping and systems, see figure 1.
3. Reinstall valve stabilizing bracket and tighten securely.
4. If installing pipe-aways, see section of pipe-away installation.
5. Rotate the valve selection handle to a position between two port numbers to ensure all reliefs are active.
6. Check connection joints for leaks using approved Leak Detector solution.
7. Install cap onto relief valve outlet.

PIPEAWAYS

Pipe-aways may be required by local codes, laws and regulations depending on the installation. The addition of pipe-away adapters and piping will restrict the flow. To properly protect any container, the total system flow must be sufficient to relieve pressure at the pressure setting of the relief valve in accordance with all applicable codes.

For installing or removing valves, see installation form for Pipe-away Kit.

If installing pipe-aways, use Marshall Excelsior pipeaway kit, MEP178K.

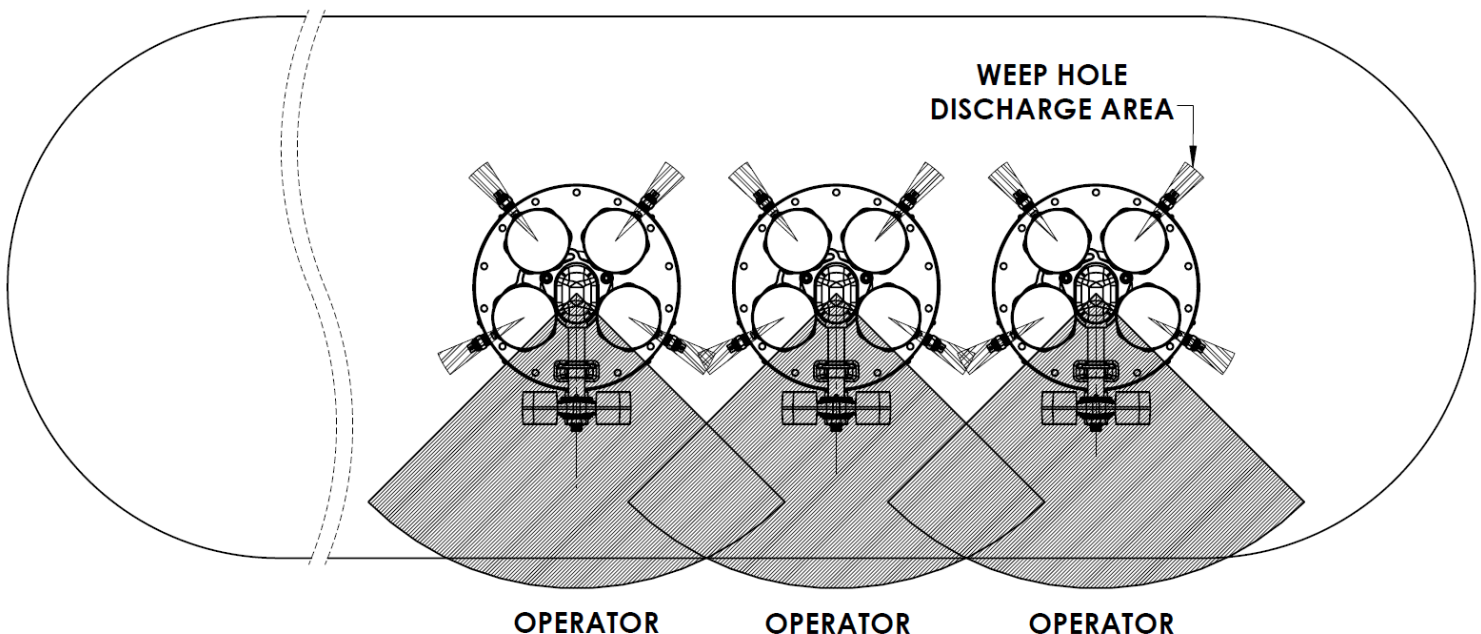


FIGURE 1: MANIFOLD OREINTATION

SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES RELIEF VALVE MANIFOLD

Parts Ordering

Important

Use only genuine MEC replacement parts. Components that are not supplied by MEC should not, under any circumstances, be used in any MEC valve, because they might adversely affect the performance of the valve, and could give rise to personal injury and property damage.

When corresponding about this equipment, always reference the equipment model or series number found on the nameplate.

Parts List For ME904S-16		
Ref.#	Description	Qty.
1	Body	1
2	Bonnet	1
3	Handle	1
4	Weather Boot	1
5	O-Ring	1
6	Screw	14
7	Nameplate	1
8	Hex Lock Collar	1
9	Machine Key	1
10	Installation Plate	1
11	Removal Plate	1
12	Washer	1
13	Handle Stem Assembly	1
14	Clapper Assembly	1
15	Gland	1
16	Gland Seat Gasket, PTFE	1
17	Stem Cap Screw	3
18	Lower Stem Bearing, PTFE	1
19	Gland Spring	1
20	Male Adapter, V-Packing	1
21	V-Pack	2
22	Gland Bearing	1
23	Upper Stem Bearing	1
24	Stem Gear	1
25	Stem Key	1
26	Bronze Flanged Sleeve Bearing	1
27	Handle Washer	1
28	Handle Nylock Jam Nut	1
29	Pivot Rod	1
30	Spring Washer	1
31	Upper Stem Washer	1
32	E-Clip	1
33	2" Plastic Cap	1
34	Valve Washer	2
35	Liquid Vent Valve Assembly	4
36	Rivet	6
37	Relief Valve Assembly	4

SQ902S-16, SQ903S-16, AND SQ904S-16 SERIES RELIEF VALVE MANIFOLD

