


ME9101C1BRK
BONNET REPLACEMENT KIT
FOR: ME9101C & ME9101D SERIES VALVE ASSEMBLY

!!WARNING!!!

READ AND UNDERSTAND ALL INSTRUCTIONS INCLUDED WITH THIS REPAIR KIT
RELIEVE ALL PRESSURE FROM SYSTEM BEFORE REMOVING VALVE FOR SERVICE

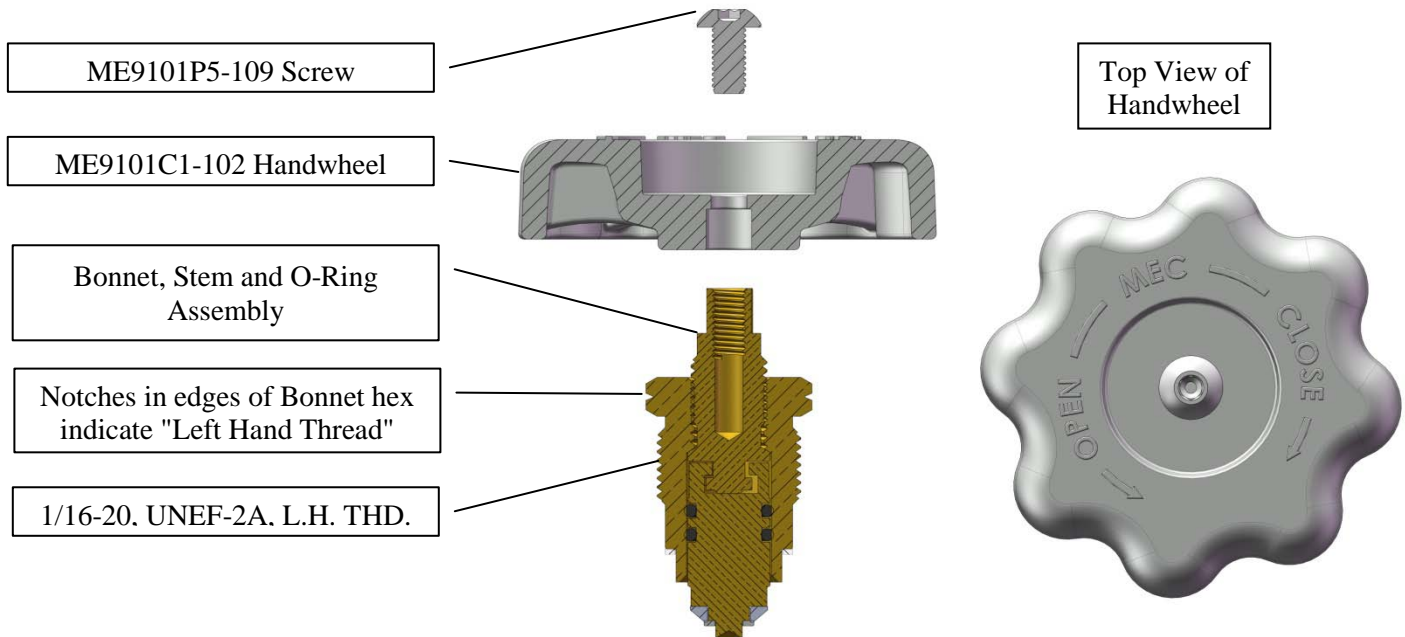

BONNET REPLACEMENT INSTRUCTIONS

A. Disassembly

1. **EVACUATE ALL GAS FROM SYSTEM BEFORE ANY DISASSEMBLY OR REPAIR.** Turn Handwheel counterclockwise as far as possible to release any gas remaining in the container
CAUTION: Do not apply force after valve is fully open.
2. Using a 1/8" hex key, remove the Handwheel screw by turning counterclockwise. Remove and discard Handwheel, Screw.
3. Remove Bonnet, O-Ring, and Stem assembly from valve body by turning clockwise, using a 13/16" wrench that can develop at least 800 in/lbs. torque. Discard assembly.
NOTE: Bonnet has left handed thread, indicated by notches in the hex edge.
4. Inspect valve body, and clean if necessary, be sure interior is free of dirt, residue and foreign particles.
CAUTION: Do not SCRATCH or MAR seat area in valve body.

B. Reassembly

1. Thread new Bonnet, O-ring, and Stem assembly into valve body counterclockwise and tighten to 450-550 in/lbs. torque, using a 13/16" wrench.
NOTE: To prevent loosening of valve body from cylinder, hold it with a second wrench while installing Bonnet.
2. Assemble Handwheel to valve stem and secure with screw. Tighten with a 1/8" hex key.
3. Turn Handwheel fully clockwise to close valve.
4. Connect the valve assembly outlet to a pressure source of at least 150 PSI. Check for leaks (as evidenced by bubbles) at all joints and sealing surfaces by submersing the valve in water, or using a suitable leak detector solution such as "Marshall Excelsior" leak detector.
CAUTION: DO NOT USE THE VALVE IF ANY JOINT OR SEALING SURFACE CONTINUES TO LEAK UNDER PRESSURE.

Valve Safety Warning

To ensure the safety of our customers, Marshall Excelsior Company would like to provide you with information regarding the hazards associated with using aging LP-Gas valves and regulators. It is hoped that this bulletin will make clear to LP-Gas dealer managers and service personnel that to avoid serious injury or property damage, careful attention and intense care must be used while installing, inspecting, and maintaining these products.

All Marshall Excelsior Products must be installed and maintained in accordance with NFPA 58 "Liquefied Petroleum Gas Code", NFPA 59 "Utility LP-Gas Plant Code", and all other applicable state, federal and local requirements.

In the interest of safety, all persons employed in handling LP-Gases shall be trained in proper handling and operating procedures. This safety bulletin along with NFPA 58 and NFPA 59 can be used in the training of new employees as well as reminding experienced employees of the hazards that can occur.

Nature of Warnings

Although warnings should regularly be as brief as possible, factors involved in filler valve and filling valve failures are very complex. These factors need to be fully understood so that proper procedures and maintenance can be implemented to prevent accidents. In its stripped-down form, the simplest possible warning would be:

Loosen filler valve from filling valve very slowly. If there is a leak, know the procedure(s) to follow.

This bulletin will not cover all safety procedures regarding the installation, operation, and maintenance of LP-Gas systems, and regarding filler valves.

Hose End Filling Valves with Acme Connectors

When reeling the hose, never let the hose end valve be dragged over the ground, dropped or banged into the truck.

If dragged, hose end valves could open accidentally or be damaged. Dragging will cause accelerated/abnormal wear and eventual valve failure, and foreign material will become lodged in the connector, causing failure of the filler valve.

Follow this procedure on every filling application in order to prevent hazardous conditions:

- Wear gloves and eye protection at all times.
- Check hose end valve and filler valve for foreign materials and, if present, remove with extreme care. If foreign material cannot be safely removed, do not proceed with filling and replace valve.
- Make sure the Acme connector easily spins on by hand.
- If a leak is detected when filling is started, immediately stop the operation and follow procedures to correct the leaking condition.
- After filling, bleed the gas trapped between the filler valve and the hose end valve by (a) using the vent on the hose end valve or (b) slightly loosening coupling nut to vent the gas before disconnecting. If the gas does not stop venting, then there is a leak in the filler valve or hose end valve. Do not disconnect filling connector. Follow your company procedure for handling this hazardous situation. Make sure your company has such a procedure.

Inspection of Filling Valves with Handwheel

- All valves should be inspected at least once a month to ensure that the handle is tight and not damaged, the stem is not bent and that there is no "play" in the threads in the bonnet. "Play" will normally not be noticed if the valve is under pressure.
- The seating area should be smooth and clean, and the Acme threads should be checked for wear, dents, or nicks.

Inspection of Quick Acting Filling Valves

- Inspect valves daily to ensure locking mechanism is working properly.
- The seating area should be smooth and clean, and the Acme threads should be checked for wear, dents, or nicks.
- Check the retaining ring on the filler connection to ensure that it is properly holding the female Acme nut or handle so that it protects surface that seats on the filler valve.
- Immediately replace or repair valves if any problems are evident.

Larger Filler and Filling Valves

When dealing with 2-1/4" and 3-1/4" Acme valve connections, only use the special wrenches designed for the purpose.

DO NOT use hammers or pipe wrenches to tighten the connections. All previous warnings about smaller valves also apply to larger valves.

General Warning

Marshall Excelsior products are mechanical devices that are subject to wear, contaminants, corrosion, and aging of components made of materials such as rubber and metal. Over time these devices will eventually become inoperative. The safe service life of these products will reflect the environment and conditions of use that they are subjected to. Regular inspection and maintenance is essential. Marshall Excelsior products have a long record of quality and service, so LP-Gas dealers may forget hazards that can arise from using aging devices that have outlived their safe service life. The length of a device's life reflects the environment in which it is used, and the LP-Gas dealer knows better than anyone about this environment.

There are developing trends in state legislation and proposed national legislation making the owner of products responsible for replacing products before they outlive their safe service life. LP-Gas dealers should be aware of such legislation as it affects them.